

1 Comp. Loc. Comfort

◆ ⇒ ["1.1 Multicontour Seat Assembly Overview", page 1](#)

◆ ⇒ ["1.2 Seat Ventilation Fan", page 6](#)

1.1 Multicontour Seat Assembly Overview

◆ ⇒ ["1.1.1 Seat, through 08.2012", page 1](#)

◆ ⇒ ["1.1.2 Seat, from 09.2012", page 5](#)

1.1.1 Seat, through 08.2012




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

A stylized logo for "erWin" is located at the bottom center of the page. It features the word "erWin" in a bold, sans-serif font, with a small graphic of a person's head and shoulders integrated into the letter "i".

i Note

Multicontour driver seat shown. Power or Manual Standard/Sport seats are similar but with fewer components.

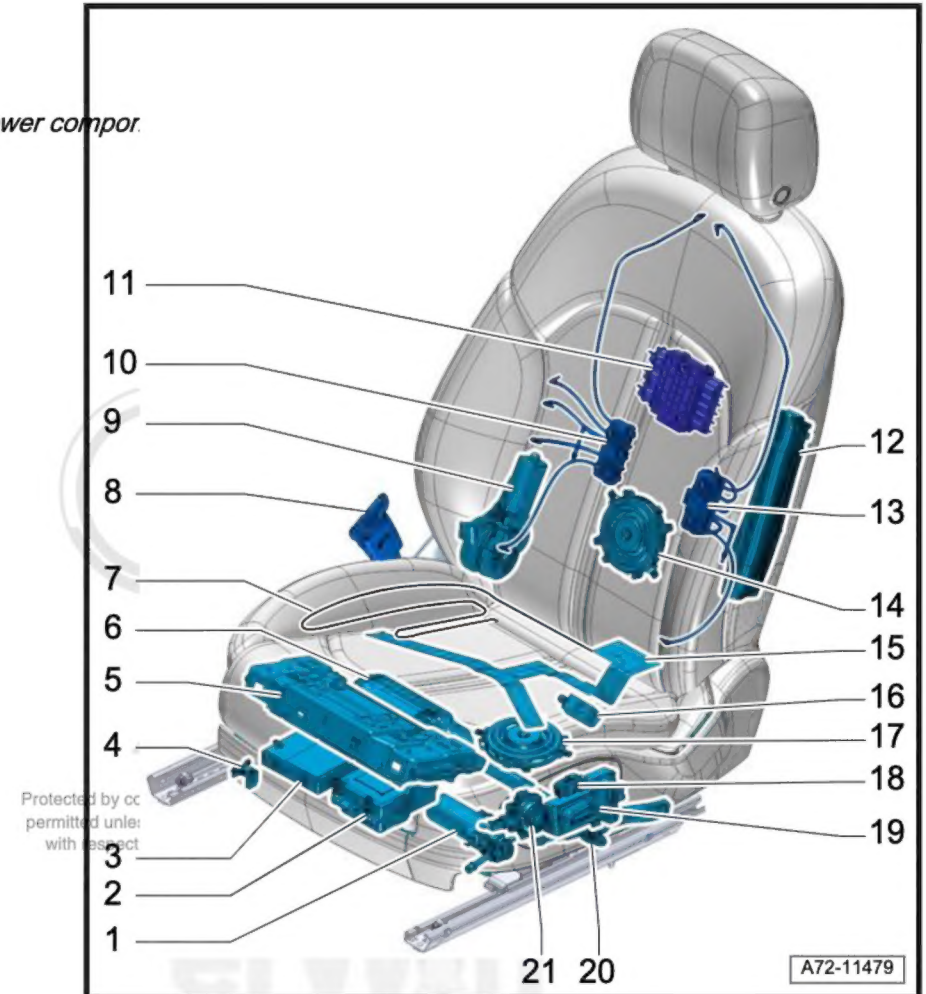

- 1 - Driver seat angle adjustment motor -V243-
- 1 - Front passenger seat angle adjustment motor -V244- similar
- 2 - Driver multicontour seat compressor -V439-
- 2 - Front passenger multicontour seat compressor -V440- similar
- 3 - Memory seat/steering column adjustment control module J136
- 3 - Front passenger memory seat control module -J521- similar
- 3 - Left front seat ventilation control module -J800- , if equipped
- 3 - Right front seat ventilation control module -J799- , if equipped, similar
- 4 - Driver seat position sensor -G553-
- 4 - Front passenger seat position sensor -G554- similar
- 5 - Driver seat depth adjustment motor -V256-
- 5 - Front passenger seat depth adjustment motor -V257- similar
- 6 - Driver seat forward/back adjustment motor -V28-
- 6 - Front passenger seat forward/back adjustment motor -V31- similar
- 7 - Left front seat temperature sensor -G344-
- 7 - Right front seat temperature sensor -G345- , similar
- 9 - Driver backrest adjustment motor -V45-
- 9 - Front passenger backrest adjustment motor -V46- similar
- 10 - Valve block 1 in driver seat -N475-
- 10 - Valve block 1 in front passenger seat -N477- similar
- 11 - Driver multicontour seat control module -J873-
- 11 - Front passenger multicontour seat control module -J872- similar
- 13 - Valve block 2 in driver seat -N476-
- 13 - Valve block 2 in front passenger seat -N478- , similar
- 14 - Driver seat backrest blower fan V388
- 14 - Front passenger seat backrest blower fan V389, similar
- 15 - Front passenger seat occupant sensor -G128-
- 17 - Driver seat cushion blower fan V390
- 17 - Front passenger seat cushion blower fan V391, similar



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

20 - Driver seat height adjustment motor -V245-

20 - Front passenger seat height adjustment motor -V246- , similar




Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

1.1.2 Seat, from 09.2012

- 1 - Driver seat angle adjustment motor -V243-
- 1 - Front passenger seat angle adjustment motor -V244- , similar
- 2 - Driver multicontour seat compressor -V439- with
□ similar
- 2 - Driver multicontour seat control module -J873-
- Front passenger multicontour seat compressor -V440-
- 3 - Memory seat/steering column adjustment control module J136
- 3 - Front passenger memory seat control module -J521-
- 3 - Left front seat ventilation control module -J800- , if equipped
- 3 - Right front seat ventilation control module -J799- , if equipped
- 4 - Driver seat position sensor -G553-
- 4 - Front passenger seat position sensor -G554- , similar
- 5 - Driver seat depth adjustment motor -V256-
- 5 - Front passenger seat depth adjustment motor -V257- , similar
- 6 - Driver seat forward/back adjustment motor -V28-
- 6 - Front passenger seat forward/back adjustment motor -V31- , similar
- 7 - Left front seat temperature sensor -G344-
- 7 - Right front seat temperature sensor -G345-
- 9 - Driver backrest adjustment motor -V45-
- 9 - Front passenger backrest adjustment motor -V46- similar
- 10 - Valve block 3 in driver seat -N523-
- 10 - Valve block 3 in front passenger seat -N524-
- 11 - Valve block 1 in driver seat -N475-
- 11 - Valve block 1 in front passenger seat -N477- , similar
- 12 - Valve block 2 in driver seat -N476-
- 12 - Valve block 2 in front passenger seat -N478- , similar
- 14 - Driver seat backrest blower fan V388
- 14 - Front passenger seat backrest blower fan V389, similar

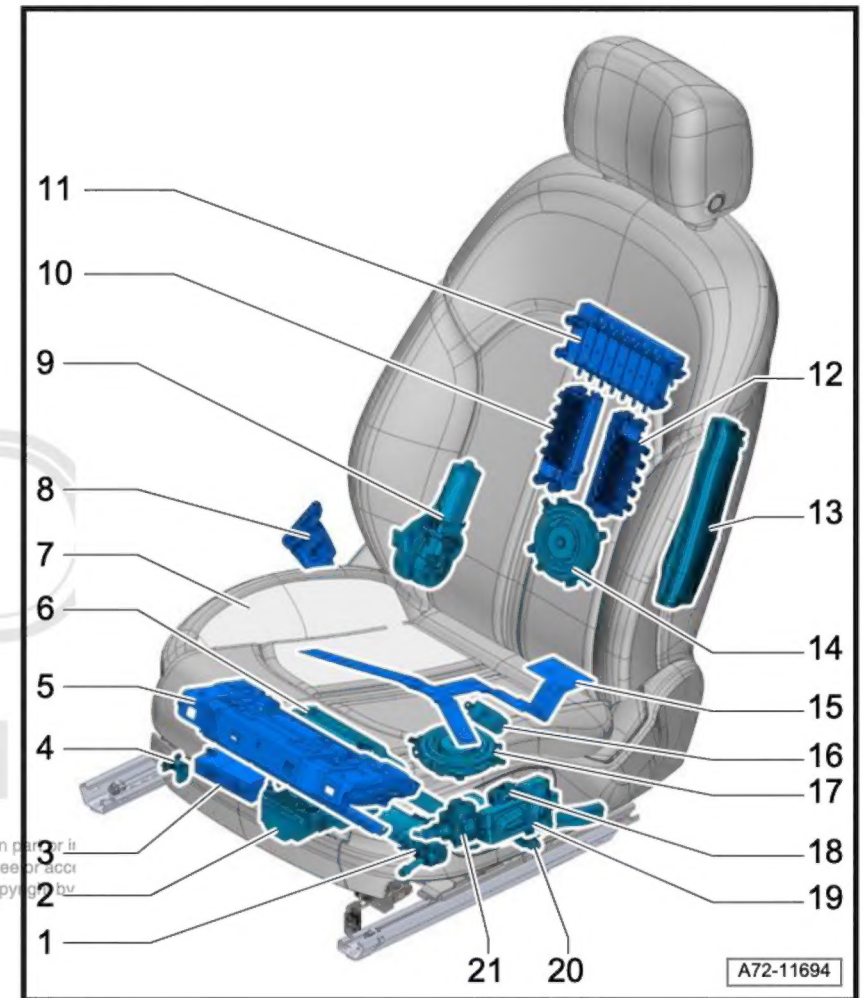

Protected by copyright. Copying for private or commercial purposes, in part or in full, without the written permission of Audi AG is prohibited. Audi AG does not guarantee the accuracy of the information in this document. Copyright © 2012 Audi AG.

- 15 - Front passenger seat occupant sensor -G128-
- 17 - Driver seat cushion blower fan V390
- 17 - Front passenger seat cushion blower fan V391, similar
- 20 - Driver seat height adjustment motor -V245-
- 20 - Front passenger seat height adjustment motor -V246- , similar

1.2 Seat Ventilation Fan


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Note

Driver seat shown

- 1 - Driver seat cushion blower fan -V390-
☐ similar
- 1 - Front passenger seat cushion blower fan -V391- , similar
- 2 - Left front seat ventilation control module -J800
☐ similar
- 2 - Right front seat ventilation control module -J799
- 3 - Driver seat cushion blower fan 2 -V419-
- 3 - Front passenger seat cushion blower fan 2 -V420- , similar
- 4 - Driver seat backrest blower fan 2 -V417-
- 4 - Front passenger seat backrest blower fan 2 -V418- , similar
- 5 - Driver seat backrest blower fan -V388-
- 5 - Front passenger seat backrest blower fan -V389- , similar

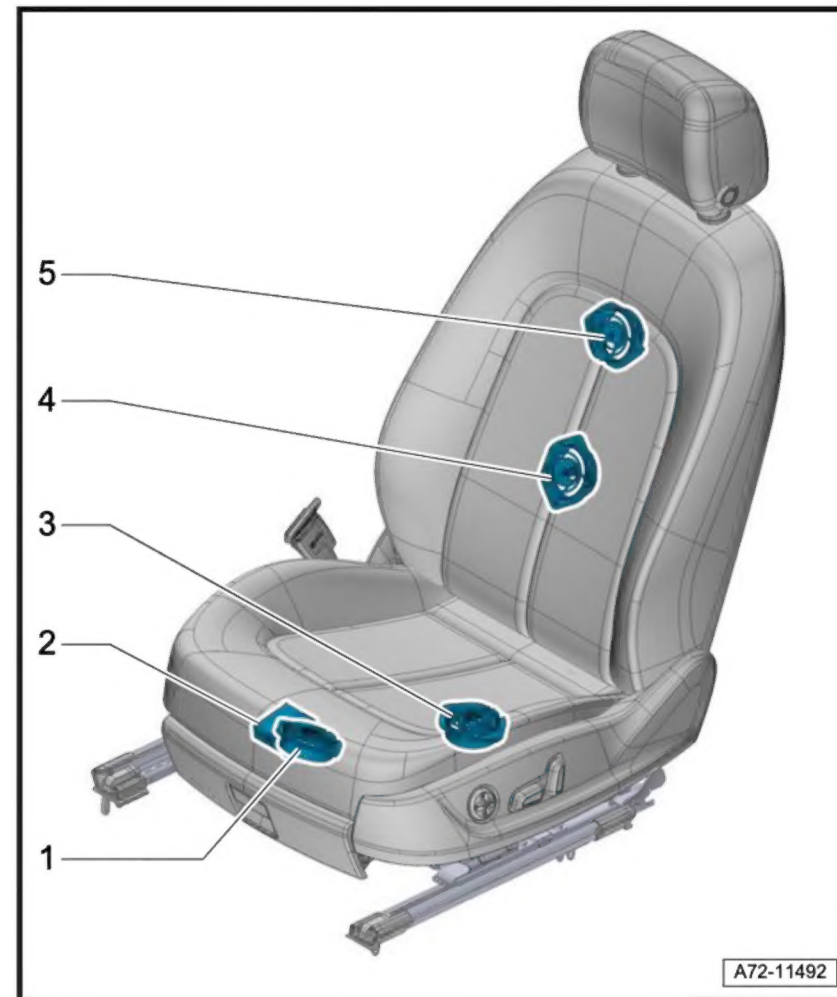

A72-11492

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Cautions & Warnings

Please read these WARNINGS and CAUTIONS before proceeding with maintenance and repair work. You must answer that you have read and you understand these WARNINGS and CAUTIONS before you will be allowed to view this information.

- If you lack the skills, tools and equipment, or a suitable workshop for any procedure described in this manual, we suggest you leave such repairs to an authorized Audi retailer or other qualified shop. We especially urge you to consult an authorized Audi retailer before beginning repairs on any vehicle that may still be covered wholly or in part by any of the extensive warranties issued by Audi.
- Disconnect the battery negative terminal (ground strap) whenever you work on the fuel system or the electrical system. Do not smoke or work near heaters or other fire hazards. Keep an approved fire extinguisher handy.
- Audi is constantly improving its vehicles and sometimes these changes, both in parts and specifications, are made applicable to earlier models. Therefore, part numbers listed in this manual are for reference only. Always check with your authorized Audi retailer parts department for the latest information.
- Any time the battery has been disconnected on an automatic transmission vehicle, it will be necessary to reestablish Transmission Control Module (TCM) basic settings using the Audi Factory Approved Scan Tool (ST).
- Never work under a lifted vehicle unless it is solidly supported on stands designed for the purpose. Do not support a vehicle on cinder blocks, hollow tiles or other props that may crumble under continuous load. Never work under a vehicle that is supported solely by a jack. Never work under the vehicle while the engine is running.
- For vehicles equipped with an anti-theft radio, be sure of the correct radio activation code before disconnecting the battery or removing the radio. If the wrong code is entered when the power is restored, the radio may lock up and become inoperable, even if the correct code is used in a later attempt.
- If you are going to work under a vehicle on the ground, make sure that the ground is level. Block the wheels to keep the vehicle from rolling. Disconnect the battery negative terminal (ground strap) to prevent others from starting the vehicle while you are under it.
- Do not attempt to work on your vehicle if you do not feel well. You increase the danger of injury to yourself and others if you are tired, upset or have taken medicine or any other substances that may impair you or keep you from being fully alert.
- Never run the engine unless the work area is well ventilated. Carbon monoxide (CO) kills.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Cautions & Warnings

- Do not re-use any fasteners that are worn or deformed in normal use. Some fasteners are designed to be used only once and are unreliable and may fail if used a second time. This includes, but is not limited to, nuts, bolts, washers, circlips and cotter pins. Always follow the recommendations in this manual - replace these fasteners with new parts where indicated, and any other time it is deemed necessary by inspection.
- Illuminate the work area adequately but safely. Use a portable safety light for working inside or under the vehicle. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.
- Friction materials such as brake pads and clutch discs may contain asbestos fibers. Do not create dust by grinding, sanding, or by cleaning with compressed air. Avoid breathing asbestos fibers and asbestos dust. Breathing asbestos can cause serious diseases such as asbestosis or cancer, and may result in death.
- Finger rings should be removed so that they cannot cause electrical shorts, get caught in running machinery, or be crushed by heavy parts.
- Before starting a job, make certain that you have all the necessary tools and parts on hand. Read all the instructions thoroughly, do not attempt shortcuts. Use tools that are appropriate to the work and use only replacement parts meeting Audi specifications. Makeshift tools, parts and procedures will not make good repairs.
- Catch draining fuel, oil or brake fluid in suitable containers. Do not use empty food or beverage containers that might mislead someone into drinking from them. Store flammable fluids away from fire hazards. Wipe up spills at once, but do not store the oily rags, which can ignite and burn spontaneously.
- Use pneumatic and electric tools only to loosen threaded parts and fasteners. Never use these tools to tighten fasteners, especially on light alloy parts. Always use a torque wrench to tighten fasteners to the tightening torque listed.
- Keep sparks, lighted matches, and open flame away from the top of the battery. If escaping hydrogen gas is ignited, it will ignite gas trapped in the cells and cause the battery to explode.
- Be mindful of the environment and ecology. Before you drain the crankcase, find out the proper way to dispose of the oil. Do not pour oil onto the ground, down a drain, or into a stream, pond, or lake. Consult local ordinances that govern the disposal of wastes.
- The air-conditioning (A/C) system is filled with a chemical refrigerant that is hazardous. The A/C system should be serviced only by trained automotive service technicians using approved refrigerant recovery/recycling equipment, trained in related safety precautions, and familiar with regulations governing the discharging and disposal of automotive chemical refrigerants.

Cautions & Warnings

- When boost-charging the battery, first remove the fuses for the Engine Control Module (ECM), the Transmission Control Module (TCM), the ABS control module, and the trip computer. In cases where one or more of these components is not separately fused, disconnect the control module connector(s).
- Some of the vehicles covered by this manual are equipped with a supplemental restraint system (SRS), that automatically deploys an airbag in the event of a frontal impact. The airbag is operated by an explosive device. Handled improperly or without adequate safeguards, it can be accidentally activated and cause serious personal injury. To guard against personal injury or airbag system failure, only trained Audi Service technicians should test, disassemble or service the airbag system.
- Do not quick-charge the battery (for boost starting) for longer than one minute, and do not exceed 16.5 volts at the battery with the boosting cables attached. Wait at least one minute before boosting the battery a second time.
- **Never use a test light to conduct electrical tests of the airbag system. The system must only be tested by trained Audi Service technicians using the Audi Factory Approved Scan Tool (ST) or an approved equivalent. The airbag unit must never be electrically tested while it is not installed in the vehicle.**
- Some aerosol tire inflators are highly flammable. Be extremely cautious when repairing a tire that may have been inflated using an aerosol tire inflator. Keep sparks, open flame or other sources of ignition away from the tire repair area. Inflate and deflate the tire at least four times before breaking the bead from the rim. Completely remove the tire from the rim before attempting any repair.
- When driving or riding in an airbag-equipped vehicle, never hold test equipment in your hands or lap while the vehicle is in motion. Objects between you and the airbag can increase the risk of injury in an accident.

I have read and I understand these Cautions and Warnings.

© 2018 Audi of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Audi of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Version 2.0